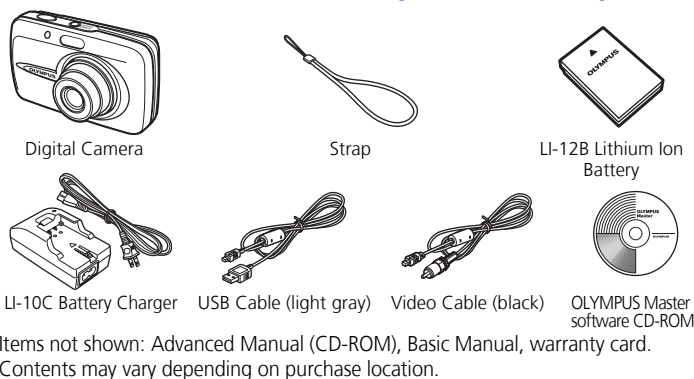**OLYMPUS®**

Quick Start Guide Stylus 600
Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support
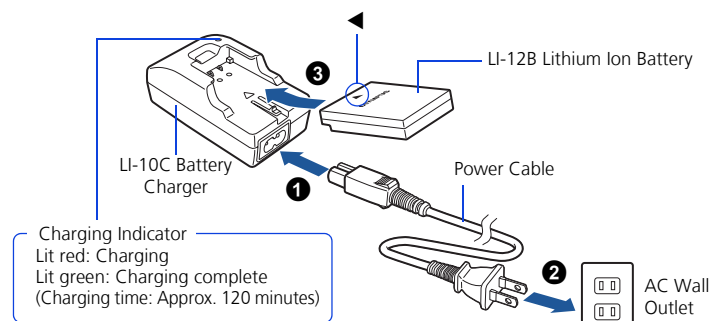
OLYMPUS IMAGING AMERICA INC.

BEFORE YOU BEGIN
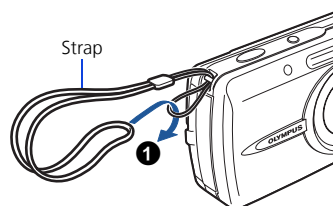
Gather these items (box contents)

Digital Camera

Strap

LI-12B Lithium Ion Battery

LI-10C Battery Charger

USB Cable (light gray)

Video Cable (black)

OLYMPUS Master software CD-ROM

Items not shown: Advanced Manual (CD-ROM), Basic Manual, warranty card. Contents may vary depending on purchase location.

Charge the battery (recommended*)

LI-12B Lithium Ion Battery

LI-10C Battery Charger

Power Cable

Charging Indicator
Lit red: Charging
Lit green: Charging complete
(Charging time: Approx. 120 minutes)

AC Wall Outlet

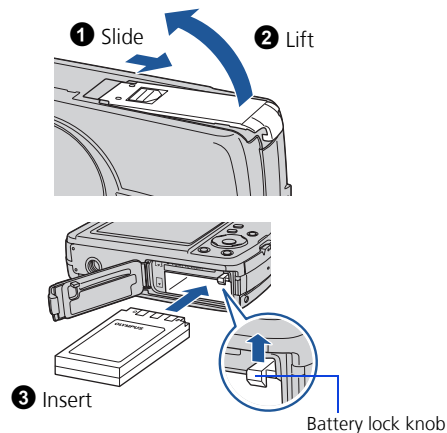*Battery comes partially charged.

---

1 GET STARTED

a. Attach the strap

Strap

● Pull the strap tight so that it does not come loose.

b. Insert the battery

❶ Slide ❷ Lift

❸ Insert

Battery lock knob

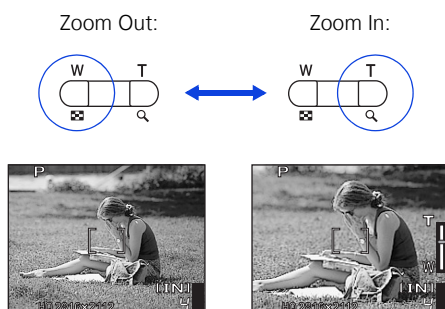### c. Set the date and time

❶ Press **POWER ON/OFF** button to turn the camera on.

❷ Press ⊚ to display the top menu, and select [MODE MENU] > [SETUP] > [⊙].

❸ Press △/▽ to set an item. Press ◁/▷ to select the next field.

POWER ON/OFF Button
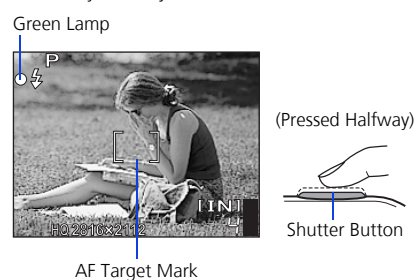
⊚ Button

FILE NAME ▷PRESET
PIXEL MAPPING ▷
⊡ ▷--------
⊙ ▷'05.01.01 00:00
DUAL TIME SETUP ▷OFF

Date format

2005 . 01 . 01
Y — M — D
00 : 00

SELECT◆⊡ SET◆⊟ GO◆OK

Operation guide

---
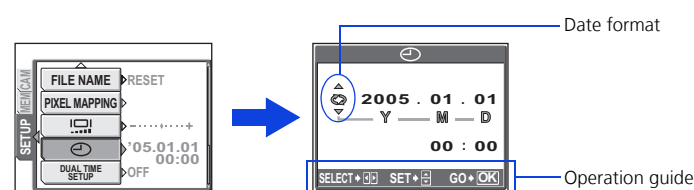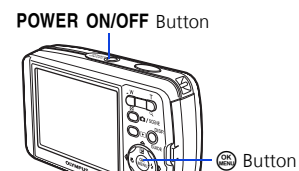
2 TAKE A PICTURE

a. Zoom

Zoom Out: Zoom In:

W T   W T

b. Focus

❶ Using the monitor, place the AF target mark over your subject.

Green Lamp
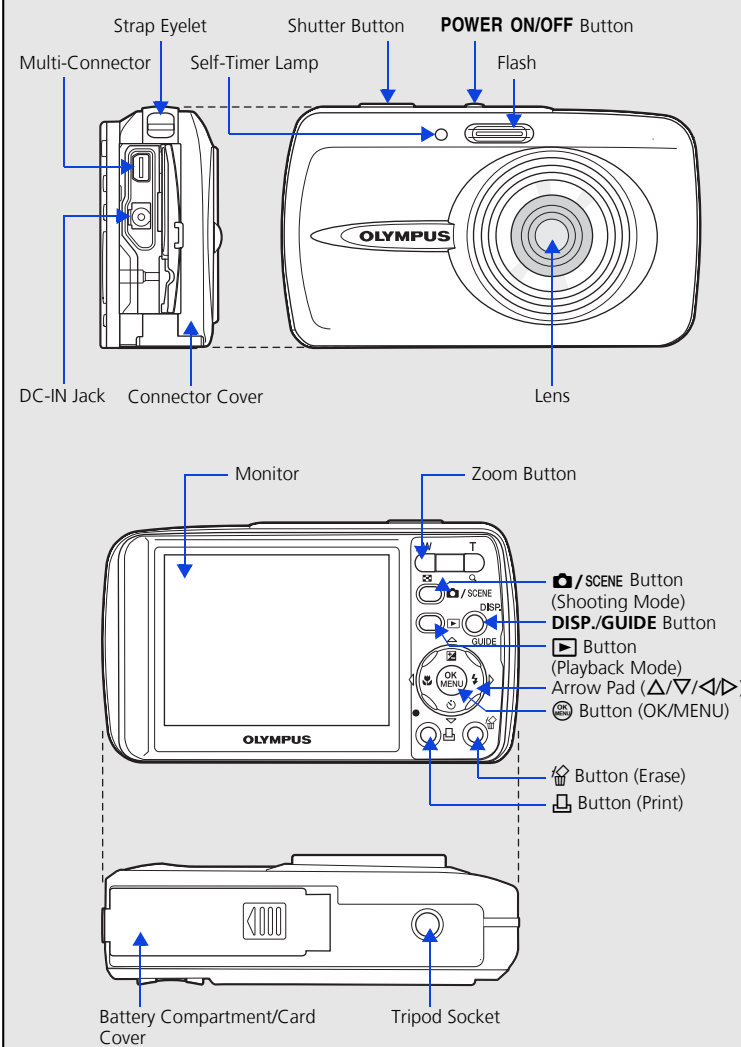
(Pressed Halfway)

Shutter Button

AF Target Mark

❷ Press and hold the shutter button halfway to lock the focus.
● The green lamp indicates the focus is locked.

c. Take the picture

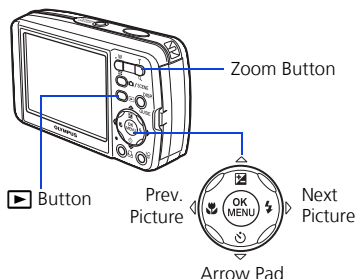❶ Press the shutter button completely to take the picture.

(Pressed Completely)

Shutter Button

CAMERA DIAGRAM

Strap Eyelet

Shutter Button

POWER ON/OFF Button

Multi-Connector

Self-Timer Lamp

Flash

DC-IN Jack   Connector Cover

Lens

OLYMPUS

Monitor

Zoom Button

⌂/SCENE Button (Shooting Mode)
DISP./GUIDE Button
▶ Button (Playback Mode)
Arrow Pad (△▽/◁▷)
⊚ Button (OK/MENU)

OLYMPUS

⌫ Button (Erase)
⎙ Button (Print)

Battery Compartment/Card Cover

Tripod Socket

---
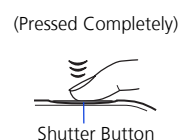
3 REVIEW OR ERASE A PICTURE

a. Press the ▶ button

● The last picture taken will be displayed.

Zoom Button

▶ Button
Prev. Picture
OK MENU
Next Picture
Arrow Pad

b. Take a closer look

W T

● Press T or W to zoom in or out.
● Press ⊚ to return to the original size.
● Press △/▽ or ◁/▷ to scroll around.

Press the ⌂/SCENE button to return to shooting mode.

c. To erase a picture

⌫ Button

⌫ ERASE [IN]

YES
NO

SELECT◆⊡   GO◆OK
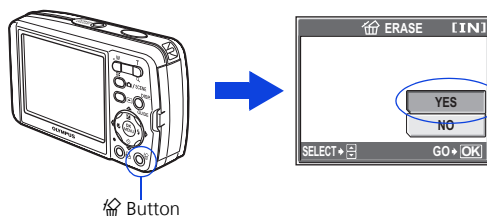
❶ Display the picture you want to erase.
❷ Press the ⌫ button.
❸ Select [YES], and press ⊚.
● The picture is permanently erased.

---

4 TRANSFER IMAGES

a. Install the software

❶ Insert the OLYMPUS Master CD-ROM.

❷ **Windows:**
Click the "OLYMPUS Master" button.

Macintosh:
Double-click the "Installer" icon.

OLYMPUS
OLYMPUS Master
CD-ROM

❸ Simply follow the on-screen instructions.
● Remember to register your camera when you install OLYMPUS Master or visit: www.olympusamerica.com/prodreg

b. Connect the camera to the computer

❶ Connect the camera and computer using the USB cable (included).
● The monitor will turn on automatically.

USB cable
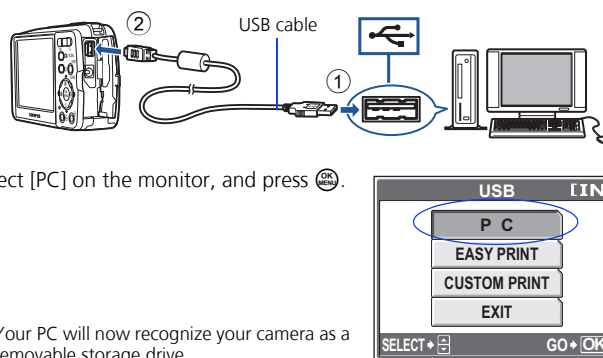
❷ Select [PC] on the monitor, and press ⊚.

USB [IN]
P C
EASY PRINT
CUSTOM PRINT
EXIT
SELECT◆   GO◆OK

● Your PC will now recognize your camera as a removable storage drive.

c. Transfer images to the computer

❶ With the camera now connected, open OLYMPUS Master.
● The [Transfer Images] window is displayed.

❷ Select the images you want to transfer, and click the [Transfer Images] button.

[Transfer Images] window
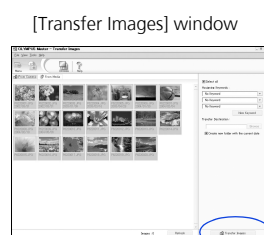
If the [Transfer Images] window is not displayed automatically:

a. Click the "Transfer Images" icon on the OLYMPUS Master main menu.

b. Click the "From Camera" icon.

[Transfer Images] button

Printed in China